

illustrated parts catalog

WARRANTY

Seller warrants that its printed circuit boards and parts thereon are free from defects in material and workmanship under normal use and service for a period of ninety (90) days from date of shipment. Seller warrants that its television monitors (in games supplied with monitors) are free from defects in material and workmanship under normal use and service for a period of thirty (30) days from date of shipment. None of the Seller's other products or parts thereof are warranted.

If the products described in this manual fail to conform to this warranty, Sellers' sole liability shall be, at its option, to repair, replace, or credit Buyer's account for such products which are returned to Seller during said warranty period, provided:

- (a) Seller is promptly notified in writing upon discovery by Buyer that said products are defective;
 - (b) Such products are returned prepaid to Sellers' plant; and
- (c) Seller's examination of said products discloses to Seller's satisfaction that such alleged defects existed and were not caused by accident, misuse, neglect, alteration, improper repair, installation or improper testing.

In no event shall Seller be liable for loss of profits, loss of use, incidental or consequential damages.

EXCEPT FOR ANY EXPRESS WARRANTY SET FORTH IN A WRITTEN CONTRACT BETWEEN SELLER AND BUYER WHICH CONTRACT SUPERSEDES THE TERMS OF THIS ORDER, THIS WARRANTY IS EXPRESSED IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON THE SELLER'S PART, AND IT NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR THE SELLER ANY OTHER LIABILITIES IN CONNECTION WITH THE SALE OF PRODUCTS UNDER THIS ORDER.

This document is and contains confidential trade secret information of Atari, Inc.

This document is loaned under confidential custody for the sole purpose of operation, maintenance or repair of Atari equipment and may not be used by or disclosed to any person for any other purpose whatever, and remains the property of Atari, Inc.

Neither it nor the information it contains may be reproduced, used, or disclosed to persons not having a need to know consistent with the purpose of the loan, without written consent of Atari, Inc.

This catalog is a supplement to the F-l Operations, Maintenance and Service Manual, Atari Publication Number TM-088. The purpose of this catalog is to provide you with the necessary information for ordering replacement parts for the F-l game.

When ordering parts from your distributor, give the part number, part name, page number of this catalog from which you got the part number, and the serial number of your F-l game. This will help to avoid confusion and mistakes in your order. We hope the results will be less downtime and more profit from your F-l game.

If there are any questions about this catalog, please contact our Customer Service Department. You may call them Monday through Friday from 7:30 am to 4:30 pm Pacific Time at one of the following numbers:

from outside California, call toll free (800) 538-6892 from inside California, call (408) 984-1900

All rights reserved. Copyright © 1977 by Atari, Inc.

No part of this publication may be reproduced by any mechanical, photographic, or electronic process, or in the form of a phonographic recording, nor may it be stored in a retrieval system, transmitted, or otherwise copied for public or private use, without permission from the publisher.

LIST OF ILLUSTRATIONS

Figure l	Final Location Assembly
Figure 2	Electronics Cabinet Final Assembly4
Figure 3	Lower Electonic Panel Assembly8
Figure 4	Connector Panel Assembly10
Figure 5	Crash Scene Mechanism Assembly14
Figure 6	Track Mechanism Assembly16
Figure 7	Arm Support Assembly18
Figure 8	Model Car Bracket Assembly20
Figure 9	Motor Bracket Assembly24
Figure 10	Track Lamp Assembly28
Figure 11	Track Lamp Support Assembly26
Figure 12	Sensor Assembly30
Figure 13	Front Display Panel Assembly32
Figure 14	Fuel Gauge Mechanism Assembly34
Figure 15	Car Body and Chassis Assembly36
Figure 16	Speed Change Assembly38
Figure 17	Steering Colomn Assembly40
Figure 18	Final Hood Assembly42

NOTICE TO ALL PERSONS RECEIVING THIS DRAWING CONFIDENTIAL REPORTOLICING forbidden without the specific written permission of Alari, Inc., Sunnyale California This drawing is only conditionally issued, and neither receip in on possession in thereof conficts or transfers any right in, or itemse to use the subject matter of the drawing or any design of technical information shown thereon, nor any right to reproduce this drawing or any part to the comportation of any part thereor, except for manufacture and the corporation's written feeling and for manufacture under the corporation's written the subject matter thereof unless by written agreement with or written permission from the corporation. Final Location Assembly A007255-02A ũ 40° 63 63




Final Location Assembly Parts List Figure 1

A007255-02


Item	Part Number	Qty.	Description Description
1	A007215-02	1	Electronics Cabinet Final Assembly - See Figure 2.
2	A007234-02	1	Car Body & Chassis Assembly - See Figure 15.
3	A007240-01	1	Final Hood Assembly - See Figure 18.
4	82-8516	2	Screw Button Hd. 4-20 x 1" Lg.
5	72-5508S	12	Screw Hex Hd. 4-20 x 2" Lg.
6	72 - 5B12	4	Screw Hex Hd. 5/16-24 x 3/4 Lg.
7	A007235-01	Ref.	Seat Assembly
8	72-045S	2	Washer Split Lock الم"
9	75-043	4	Washer Split Lock 5/16
10	75-048	2	Wahser Split Lock #8
11	008701-01	l .	Steering Wheel
12	007700-01		Steering Wheel Spacer
13	007705-01		Steering Wheel Hub
14	72-8716		Screw Socket Hd. 5/16 x 1" Lg.
15	000599	Ref.	Cover (Atari)
16	72-6808	2	Screw, Pan. Hd., #8-32 x ½" Lg. Phil.
17	75-043	Ref.	5/16 Split Lock Washer
i I			
		ŀ	
1			
i I			
]	
		1	

NOTICE TO ALL PERSONS RECEIVING THIS DRAWING

NOTICE TO ALL PERSONS RECEIVING THIS DRAWING CONFIDENTIAL: Reproduction forbidden without the specific written permission of Atari, Inc., Sunnyvale, California. This drawing is only conditionally issued, and neither receipt nor possession thereof confers or transfers any right in, or license to use, the subject matter of the drawing or any design or technical information shown thereon, nor any right to reproduce this drawing or any part thereof, except for manufacture by vendors of Atari incorporated and for manufacture under the corporation's written license, no right to reproduce this drawing is granted or the subject matter thereof unless by written agreement with or written permission from the corporation

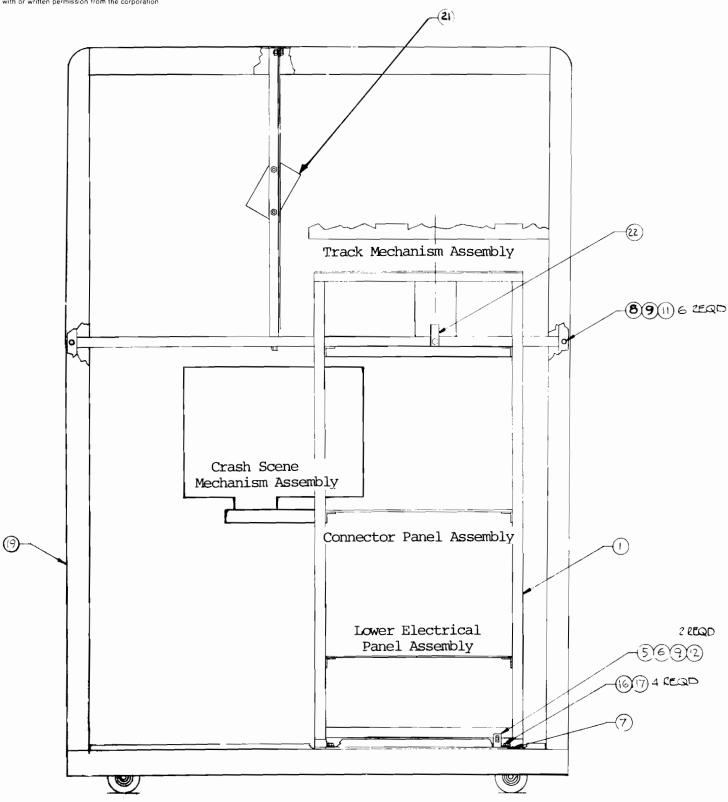

Electronics Cabinet Final Assembly A007215-02 A Figure 2

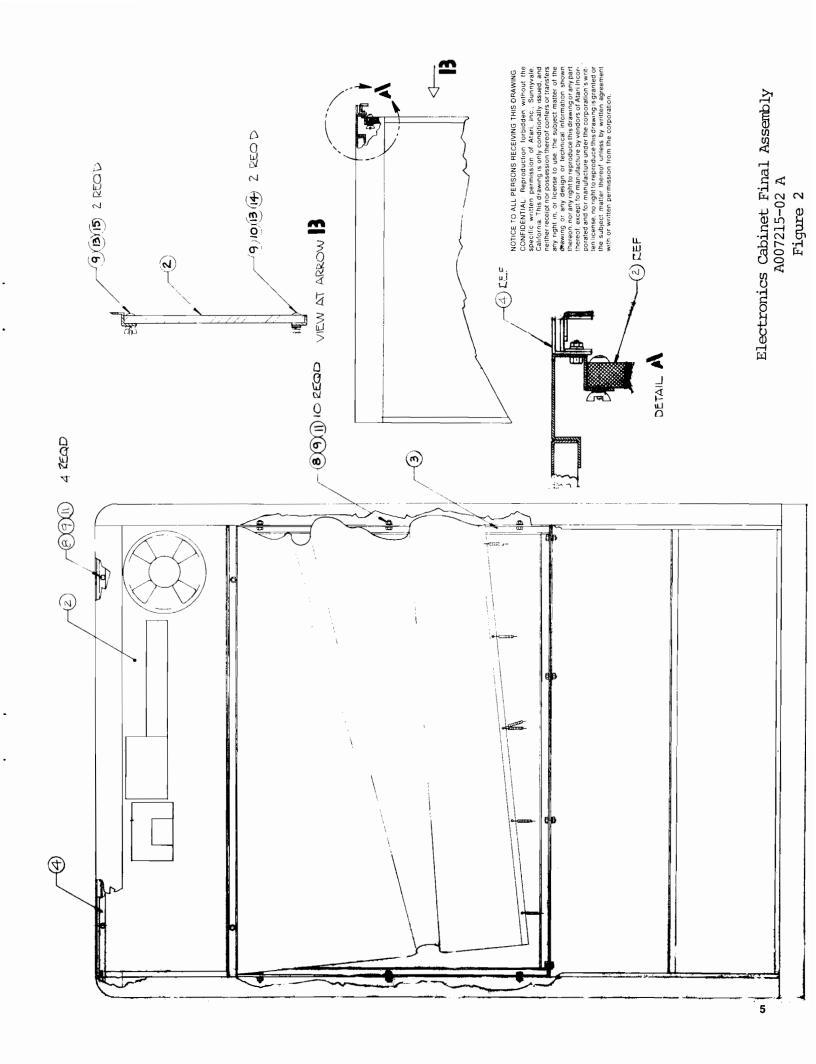



Electronics Cabinet Final Assembly Parts List Figure 2

A007215-02

Item	Part Number	Qty.	Description A007215-02
1	A008598-01	1	*Electronics Assembly
2	A008387-01	1	Front Display Panel Assembly
3	A007213-02	1	Projection Screen Assembly
4	A007166-01	1	Top Panel Bracket Attachment
5	007227-01	1	Interlock Switch Bracket
6	68-002	1	Interlock Switch
7	78-2712	1	Grommet (Heyco-SB-1375-16)
8	72-5208	20	10-32 x ½" Lg. Screws, Hex Hd.
9	75-040	26	#10 Lock Washer
10	75-010S	2	#10 Flat Washer
11	75 - 920S	20	10-32 Hex Nuts
12	72 - 1010S	2	10-32 x 5/8"Lg Screw, Mach, Pan Hd.
13	75-5120B	4	10-24 x 1¼"Lg Blk Carriage Bolt
14	75 - 912S	2	10-24 Hex Nuts
15	75-931	2	10-24 Wing Nuts
16	72-5510	4	½-20 x 5/8" Lg Hex Hd Screw, Mach.
17	75-045S	4	Washer Split Lock
18		'	,
19	A007211-01	1	Electronics Cabinet Assembly
20	A007478-XX	1	Packing Container (Elect. Cab.)
21	A008184-01	1	Fan Bracket Assembly
22	008028-01	1	Fan Bracket Support Weldment
			* See Figures 3 through 12 for subassemblies of this assembly.
			or dis assembly.

KP020

•			

TERN D TRANSFORMER) (TRANSTORKER) 1 1 0 ۰. コヨム 0 **(** 2 - ® -BLK ©. ВГК ٦Э٨ THW Brk 80 BLK . 0 BLANK ハヨム ф ф 1FL THW RED m 73<u>7</u> 0 ġ ರಕರ ٦ЭХ O36 ハヨム \oplus 0 1 0 (D)(D)(D)(D) 0 0 4 **þ**π (⑤) אָרָר גדָר אדר (3) (j (3) (m) H (P) ***** (3)(3) 77x 80 VEC VEC © © © 99 (\$) (2) **(** (0) B () **©**@ (9) 0 (1) **®** (4) J (v) (4) ٦ (R)(R) 9 **60**

Lower Electrical Panel Assembly A008611-01B

Figure 3


NOTICE TO ALL PERSONS RECEVING THIS DRAWING CONFIDENTIAL. PERSONS RECEVING THIS DRAWING CONFIDENTIAL. Persoducing retraded without the specific written permission of Alari no. Sunnyale California. This drawing is only conditionally issued and neither receipt nor possession thereof confide or translers any right in, or license to use the subject matter of the drawing or any desting or letter and included in the corporations with thereof, accept for manufacture by vendors of Alari Incorporated and for manufacture under the corporations with ten license. The produce his drawing is granted or the subject matter thereof unless by written agreement with or written permission from the corporation.




Lower Electrical Panel Assembly Parts List Figure 3


A008611-01

Item	Part Number	Qty.	Description
1	008183-01	1	Lower Electrical Panel
2	008181-01	1	Switch Bracket
3	008189-01	1	Transformer Small
4	008190-01	1 1	Transformer Large
5	64-01040402	1 1	4 Pos. Switch
6	16-5152	3	Resistor 1.5K Switch
7	3A-MDA3502	3	Diode Bridge
8	29-065	2	Capacitor
9	29-066	1	Capacitor
10		3	Capacitor Holders (Supp. with item 8 & 9)
11	79-3202	8	Fuse Blocks
12	79~ 11803	1	Terminal Block
13	46-201102	2	lA Fuse
14	46-201202	2	2A Fuse
15	46-201302	3	3A Fuse
16	46-301102	1	10A Fuse
17	A008325-01	1	Power Harness Assembly
18	A008927-01	1	Jumper Harness Assembly 22" Lg.
19	72-1604S	6	Screw Pan Hd. $\#6-32 \times \frac{1}{4}$ " Lg.
20	75-046	19	Washer Split Lock #6
21	72-1808S	11	Screw Pan Hd. $\#8-32 \times \frac{1}{2}$ " Lg.
22	75-028S	8	Washer Flat #8
23	75-048	11	Washer Split Lock #8
24	75-928S	8	Nut Hex #8-32
25	72-1004S	2	Screw Pan Hd. $\#10-32 \times \frac{1}{4}$ " lg.
26	75-040	2	Wahser Split Lock #10
27	72-1612S	3	Screw Pan Hd. #6-32 x 3/4" Lg.
28	72-1608S	10	Screw Pan Hd. #6-32 x ½" Lg.

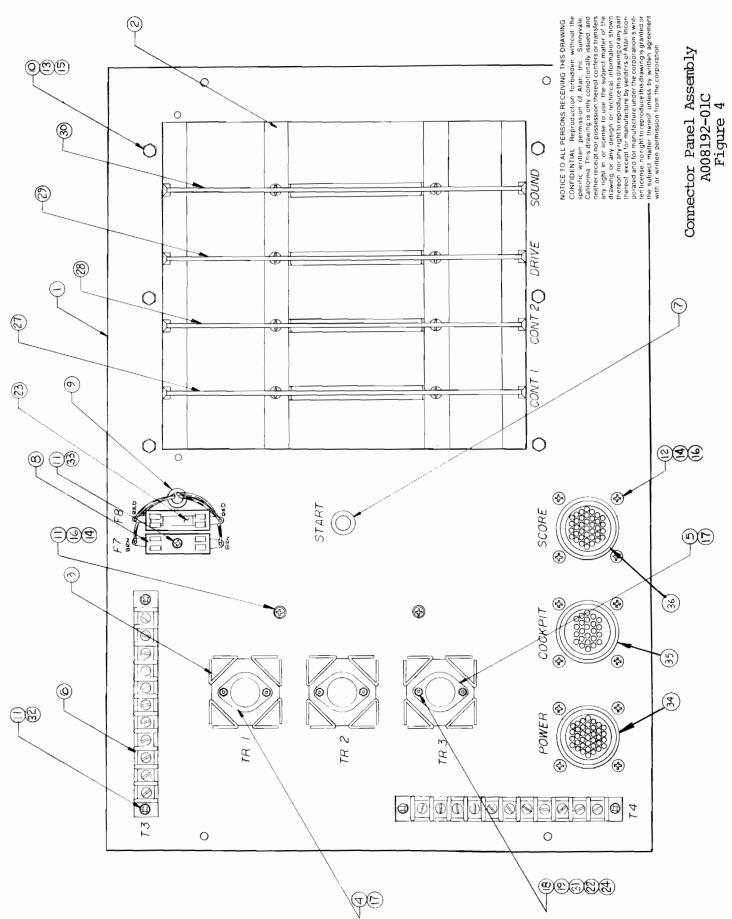

Connector Panel Assembly A008192-01C Figure 4

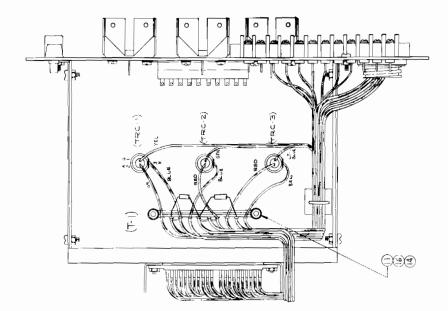

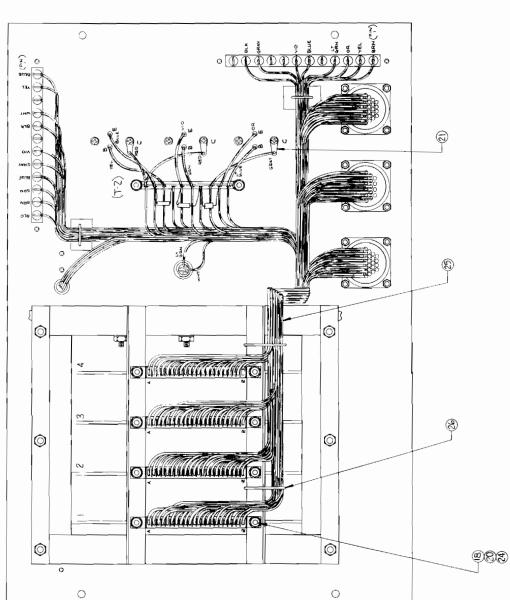

NOTICE TO ALL PERSONS RECEIVING THIS DRAWING CONFIDENTIAL Reproduction forbidden without the specific written permission of Alari, Inc.; Sunnyale, California. This drawing is only conditionally issued, and nether receip into possession intered confess or translers any right in, or iterase to use the subject matter of the drawing or any design or technical information shown thereon, nor any right to reproduce this drawing or any part thereor, nor any right to reproduce this drawing or say that the produces no right to reproduce this drawing is granted or the subject matter thereof unless by written agreement with or written permission from the cooporation.




Connector Panel Assembly Parts List Figure 4

A008192-01C

T.	D	1 0:	A008192-010
Item	Part Number	Qty.	Description
1	008031-01	1	Connector Panel
2	A008177-01	1	Card Cage Assembly
3	78-06001	3	Heat Sink
			On early F-1 units, serial numbers 0001 through 0600,
4	34-2N3055	2	one common heat sink is used for TR1, TR2, and TR3. Power Transistor 34 2N3055
5	33-2N379	1	Power Transistor 33 2N379
6	79-1A112	2	Terminal Block Magnum #309312
7	62 - 003	1	Button Switch Grayhill #46-05-05
8	79-3202	2	Fuse Block
9	78-2633	1	Grommet Rubber
10	72-5206	6	Screw Hex Hd. 10-32 x 3/8 Lg.
11	72-1606S	10	Screw Pan Hd. 6-32 x 3/8" Lg.
12	72-1608S	12	Screw, Pan Hd, $6-32 \times \frac{1}{2}$ Lg.
13	75-040	6	Washer Split Lock #10
14	75-046	16	Washer Split Lock #6
15	75 - 921S	6	Nut Hex 10-32
16	75-926S	16	Nut Hex 6-32
17	78-16008	3	Sil Pads
18	72-1408S	14	Screw Pan Hd. #4-40 x ½" Lg.
19	75-014	9	Washer Flat #4
20	75-044	2	Washer Split Lock #4
21	79-014	3	Solder Lugs
22	75-09012	6	Washer Shoulder #4 Teflon
23	46-201102	2	Fuse 1 AMP
24	75 - 924S	14	Nut Hex #4-40
25	008329-01	1	Wire Harness
26	78-24001	A/R	Tie Wrap
27	007421-01	1	P.C. Board Assembly Cont. 1
28	007423-01	1	P.C. Board Assembly Cont. 2
29	007427-01	1	P.C. Board Assembly Drive
30	007425-01	1	P.C. Board Assembly Sound
31	72-034	6	Washer Lock Ext. Star #4
32	72-036	4	Washer Lock Ext. Star #6
33	75-056	2	Washer Lock L nt. Star #6
34			AMP Recept Series I Flanged 37 Pos. #206306-1
35			AMP Recept Series I Flanged 24 Pos. #206838-1
36			AMP Recept Series I Flanged 37 Pos. #206151-1
			Note: Refer to F-1 Operations, Maintenance and Service Manual, TM-088, for breakdown of items 27, 28, 29 and 30.

A Warner Communications Company

Note: Items 34, 35 and 36 part numbers are for later F-1 units beginning with serial number 0601.

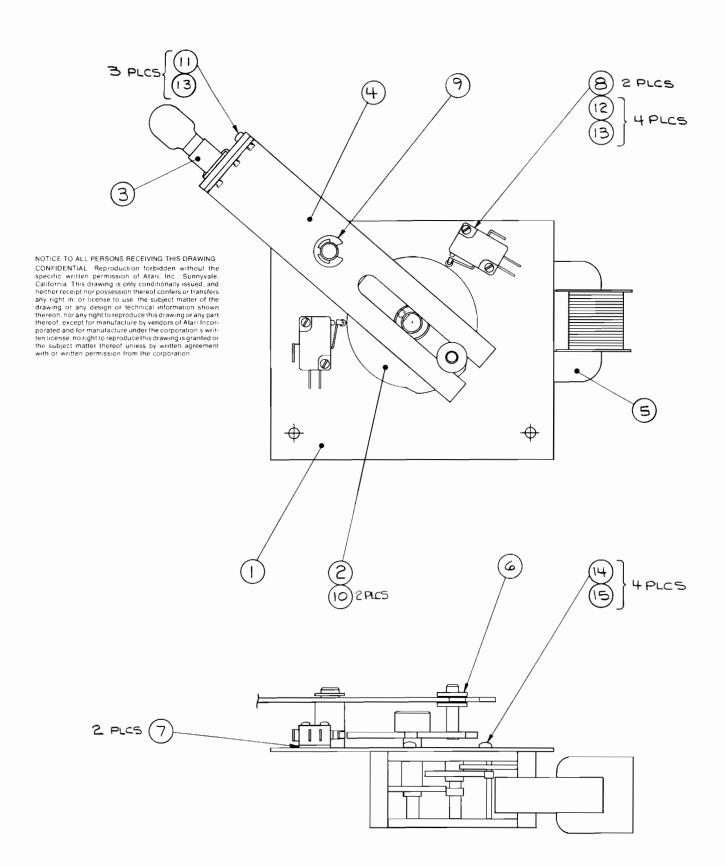

Crash Scene Mechanism Assembly A008187-01 A Figure 5



Crash Mechanism Assembly Parts List Figure 5


Note: On early F-1 units, serial numbers

0001 through 0600, piece parts of this assembly cannot be replaced.

Replace entire assembly.

A008187-01

—			A008187-01
Item	Part Number	Qty.	Description
1	A008483-01	1	Plate & Pivot Post Assembly
2	A008182-01	1	Cam Assy
3	A007670-01	1	Crash Scene Lamp Assy
4	A008489-01	1	Arm & Bushing Assy
5	008044-01	1	Crash Scene Motor
6	005333-01	[1	Hub
7	007371-01	2	Switch Spacer
8	65 - 311C	2	Micro Switch, Cherry E22-00K
9	73-3003	1	Retaining 'E' Ring, .38 Dia Shaft
10	75-4606	2	Scr Mach., Set, 6-32 x 3/16 Lg.
11	72-1407S	3	Scr Mach., 4-40 x 7/16 Lg, Pan Hd.
12	72 - 1412S	4	Scr Mach., 4-40 x 3/4 Lg, Pan Hd.
13	75-044	7	Washer, #4, Split-Lock
14	72 - 1806S	4	Scr Mach., 8-32 x 3/8 Lg, Par Hd.
15	75-048	4	Washer, #8, Split-Lock
		1 1	
1] [
l			
		i i	
		[

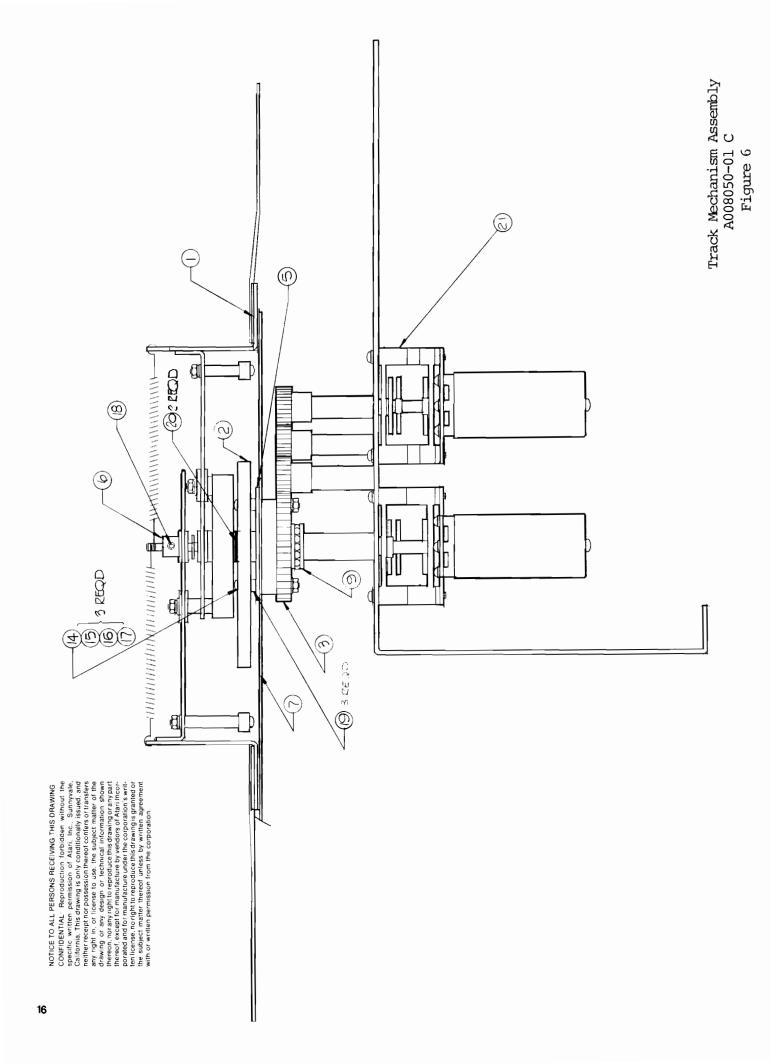




Track Mechanism Assembly Parts List Figure 6

A008050-01

Item	Part Number	Qty.	Description
1	A008049-01	1	Arm Support Assy See Figure 7.
2	007684-01	1	Track Cam
3	007659-01	1	Track Spur Gear (45 teeth)
4			
5	007679-01	1	Track Cam Retaining Plate
6	008051-01	1	Track Main Shaft Collar
7	A008590-01	1	Track Base Assy
8			
9	76-2390950001	1	Bearing Thrust NSK51100 (National Seal)
10			
11			
12			
13			
14	72-1828C	3	Screw, Pan Hd, 8-32 x 1 3/4
15	75-0185	3	Washer Flat #8
16	75-048	3	Washer Split Lock #8
17	75-918S	3	Nut Hex 8-32
18	75-0402	1	Screw Set 8-32 x 1/4 LG
19	008431-01	3	Spacer, CAM
20 21	75-07007 A008180-01	2 1 *	Washer, Flat, .255 I.D. x .566 O.D. x .030 Thk Motor Brkt. Assembly - See Figure 9.
			* Piece parts of item 21 cannot be replaced on early F-1 units, serial numbers 0001 through 0600. Replace entire Motor Bracket Assembly.

A Warner Communications Company

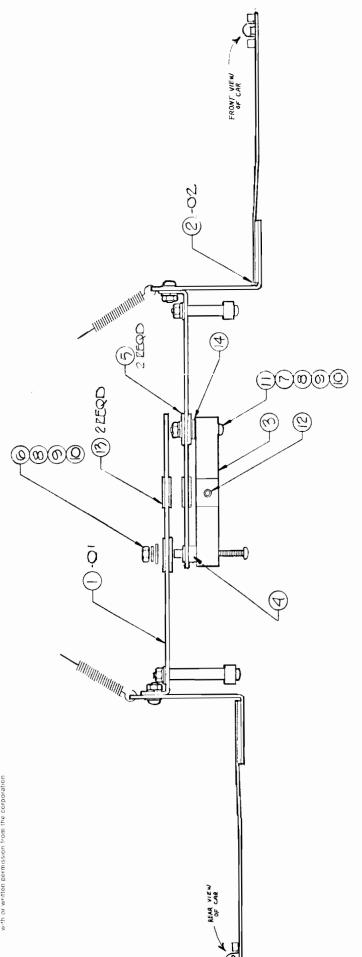




Arm Support Assembly Parts List Figure 7

A003049-01

Item Part Number Qty. Description 1 A008048-01 1 Model Car Brkt. Assy See Figure 8.	
2	Thk

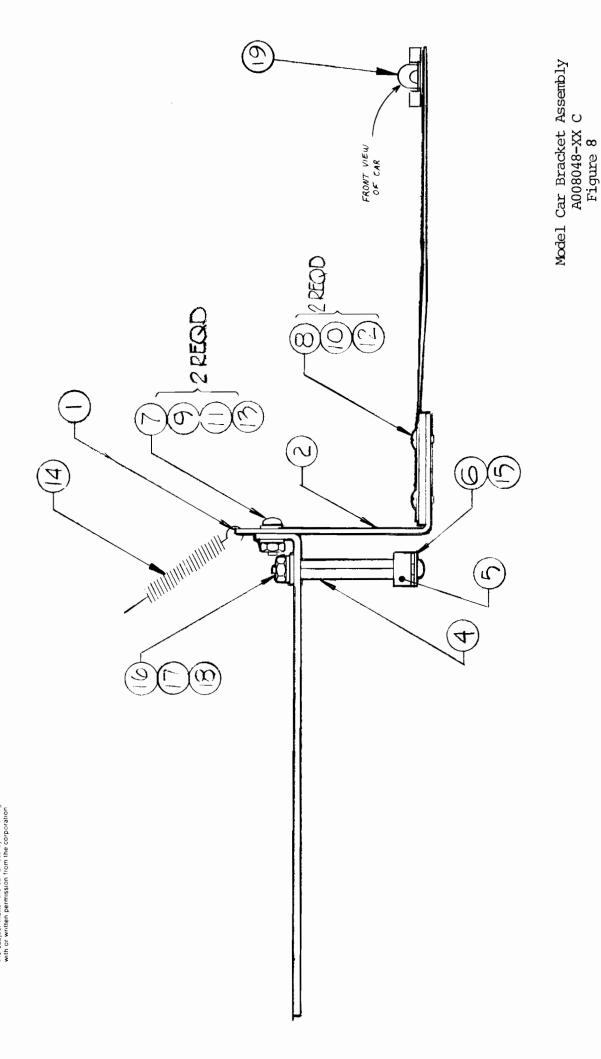

NOTICE TO ALL PERSONS RECEIVING THIS DRAWING CONFIDENTIAL REPRODUCTION for DEAD with the Specific without the Specific written permission of Alari, inc. Sumpvaile California This drawing so that you conditionally issued and neither receipt not possession hierard confess or transfers any right in, or license to use the subject matter of the drawing or any design or technical information shown thereot, except for manufacture ty vendics of Afair Incorporated and for manufacture under the corporation's writter thereot or manufacture under the corporation's writter thereot unites by written agreement with or written permission from the corporation.

20



Model Car Bracket Assembly Parts List Figure 8

A008048-01

			A008048-01
Item	Part Number	Qty.	Description
1	007681-01	1	Arm
2	007685-01	1	Model Car Brkt.
3	007685-01	1	rocei cai bikt.
	007600 01	1	Messels Com Chandoff
4	007688-01	1	Track Cam Standoff
5	76-161002	1	Bearing, Ball (National Seal NSK62 4Z)
6	73–3005	1	Retaining Ring 5133-15
7	72-1806S	2	Screw Pan HD 8-32 x 3/8 LG
8	72-1403S	2 2	Screw Pan HD 4-40 x 3/16 LG
9	75 - 018S		Washer Flat #8
10	75 - 014S	2	Washer Flat #4
11	75-048	2	Washer Split Lock #8
12	75-044	2	Washer Split Lock #4
13	75 - 918S	2	Nut Hex 8-32
14	008058-01	1	Spring
15	75 - 07008 ^S	1	Washer Flat,161 I.D. x,3750.D x,030 Thk Steel
16	75 - 016S	1	Washer, Flat #6
17	75-046	1	Washer, Split Lock #6
18	75-916S	1	Nut, Hex #6-32
19	A008390-01	1	Competition Car Assembly

W A Warner Communications Company




Model Car Bracket Assembly Parts List Figure 8

A008048-02

A008048-			
Item	Part Number	Qty.	Description
		,	
1	007681-01	1	Arm
2	007685-01	1	Model Car Brkt
3			
4	007688-02	1	Track Cam Standoff
5	76-161002	1 1	Bearing, Ball (National Seal NSK624Z)
6	72-1810S	1	Screw Pan Hd 8-32 x 1 3/8 Lg.
7	72-1806S	2	" " " x 3/8 Lg.
8	72-1403S	2	" " 4-40 x 3/16 Lg.
9	75-018S	2	Washer Flat #8
10	75-014S	2	" #4
11	75-048	2	" Split Lock #8
12	75-044	2	" " #4
13	75 - 918S	2	Nut Hex 8-32
14	008058-01	1 1	Spring
15	75-07008S	1	Washer, Flat, .161 I.D. x .375 O.D. x .030 Thk
16	75-016S	1	Washer, Flat, #6
17	75-046	1	Washer, Split Lock, #6
18	75-916S	1	Nut, Hex, #6-32
19	A008390-02	1	Competition Car Assembly
1			
1			
ĺ			
1			
		1	

A Warner Communications Company

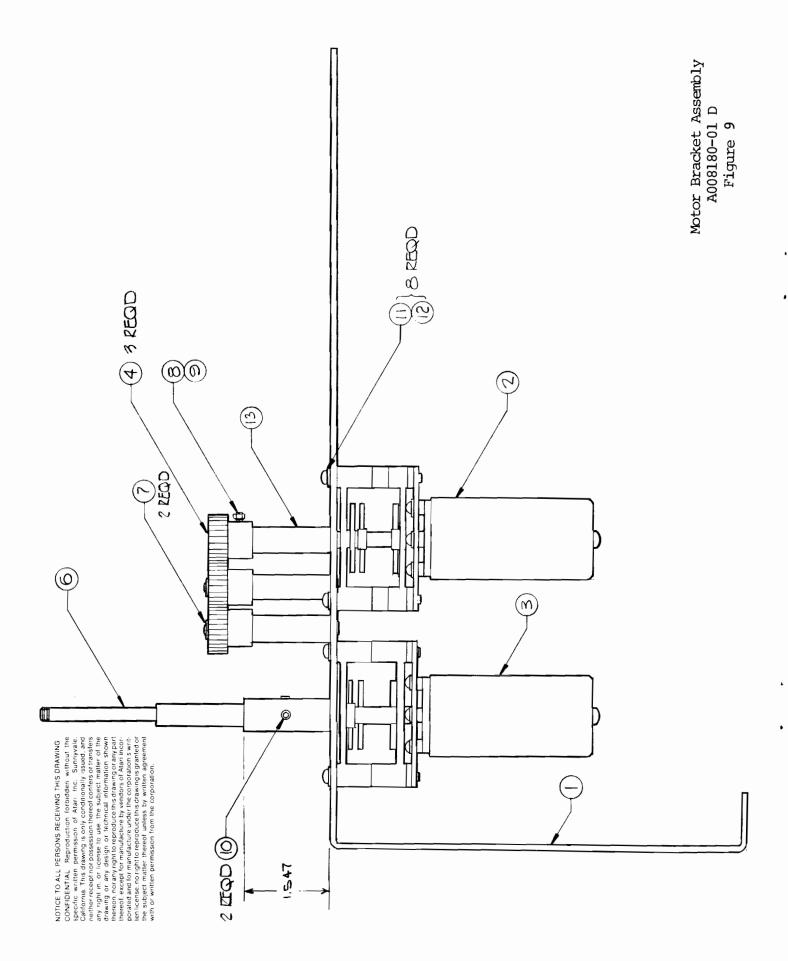




Motor Bracket Assembly Parts List Figure 9

Note: On early F-1 units, serial numbers 0001 through 0600, piece parts of this assembly cannot be replaced.

Replace entire assembly.

A008180-01

Item	Part Number	Qty.	Description A008180-01
1	A007687-01	1	Idler Gear Standoff Assembly
2	008041-01	1	Motor Track 45 RPM 12 VDC
3	008042-01	1	Motor Competition Car 18 RPM 12 VDC
4	007658-01	3	Track Spur Gear (18 teeth)
5			
6	008057-01	1	Shaft Track Motor
7	73-3004	2	Retaining Ring (Truarc 5133-75)
8	75-4806	.2	Screw Set 8-32 x 3/8 LG
9	75 - 928S	1	Nut Hex 8-32
10	75-4802	2	Screw Set 8-32 x 1/4 LG
11	72-1806S	8	Screw PAN HD 8-32 x $3/8$ " Lg.
12	75-048 009170-01	8	Washer Split Lock #8 Adapter, Drive Gear

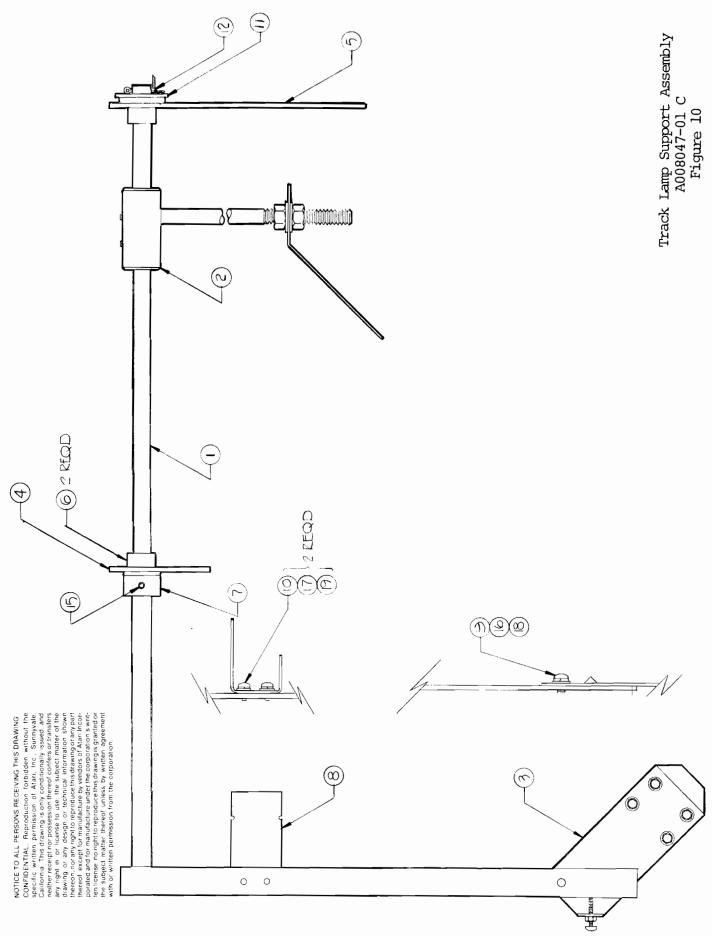




Track Lamp Support Assembly Parts List Figure 10

A008047-01

			A008047-01
Item	Part Number	Qty.	Description
1	007694-01	1	Car Display Brkt.
2	A008037-01	1	Car Image Support Assembly
3	A007667-01	1	* Track Lamp Assy See Figure 11.
4	007695-01	1	Top Bearing Plate
5	007696-01	1	Botttom Bearing Plate
6	007698-01	2	Bearing
7	007699-01	1	Collar
8	A008046-01	1	Sensor Assy See Figure 12.
9	72-1006S	1	Screw Pan HD. 10-32 x 3/8 Lg.
10	72 - 1806S	2	Screw Pan HD. 8-32 x 3/8 Lg.
11	75 - 021S	1	Washer Flat 3/8 I.D. x .72
12	73-0112	1	Cotter Pin .062 DIA 3/4 Lg.
13			
14		ļ	
15	72-4004	1	Screw Set 10-32 x ¼ Lg.
16	75-010S	1	Washer Flat #10
17	75-018S	2	Washer Flat #8
18	75-040	1	Washer Split Lock #10
19	75-048	2	Washer Split Lock #8
			* Piece parts of item 3 cannot be replaced on early F-1 units, serial numbers 0001 through 0600. Replace entire Track Lamp Assembly.

W A Warner Communications Company

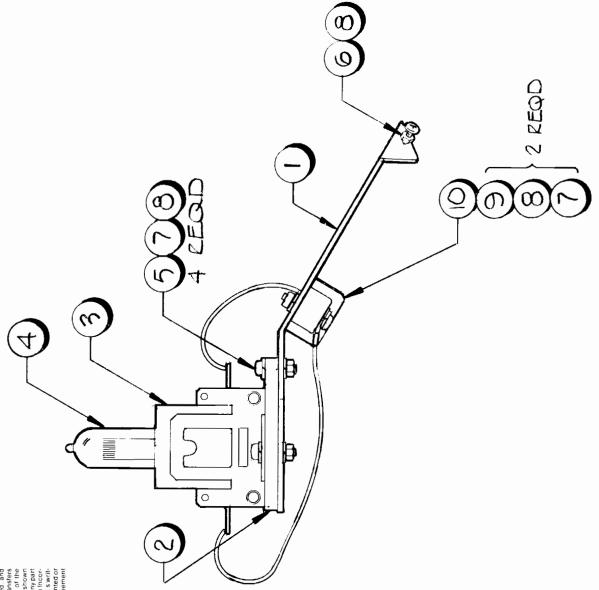

NOTICE TO ALL PERSONS RECEVING THIS DRAWING CONFIDENTIAL.


CONFIDENTIAL. Reproduction forbidden without the specific written permission of Arari, inc., Sunnyale California. This drawing is only conditionally issued and neither receip non oposession thereof confers or drawing any right in or ticense it ouse, the subject marter of the drawing or any design of sectional information shown thereon, nor any right to reproduce this drawing or any part thereor, except for manufacture by wendors of Arari Incorporated and for manufacture entire that drawing spranted or the subject matter thereor, written agreement with or written permission from the corporation.



Track Lamp Assembly Parts List Figure 11

On early F-1 units, serial numbers 0001 through 0600, piece parts of this assembly cannot be replaced. Replace entire assembly. Note:

Item	Part Number	Qty.	Description	
1	007665-01	1	Track Lamp Brkt.	
2	007666-01	1	" " Holder	
3	A007668-01	1	Lamp Socket Assy	
4	70-4101	1	Lamp 100W	
5	72-1406S	4	Screw Pan Hd 4-40 x 3/8 Lg.	
6	72-1416S	1	" " " x l"Lg.	
7	75-044S	12	Washer Split Lock #4	
8	75 - 914S	7	Nut Hex #4	
9	72-1410S	2	Screw Pan Hd 4-40 x 5/8 Lg.	
10	79-11 X02	1	Barrier Terminal Block (Magnum 103102)	
1				
[,			
1				

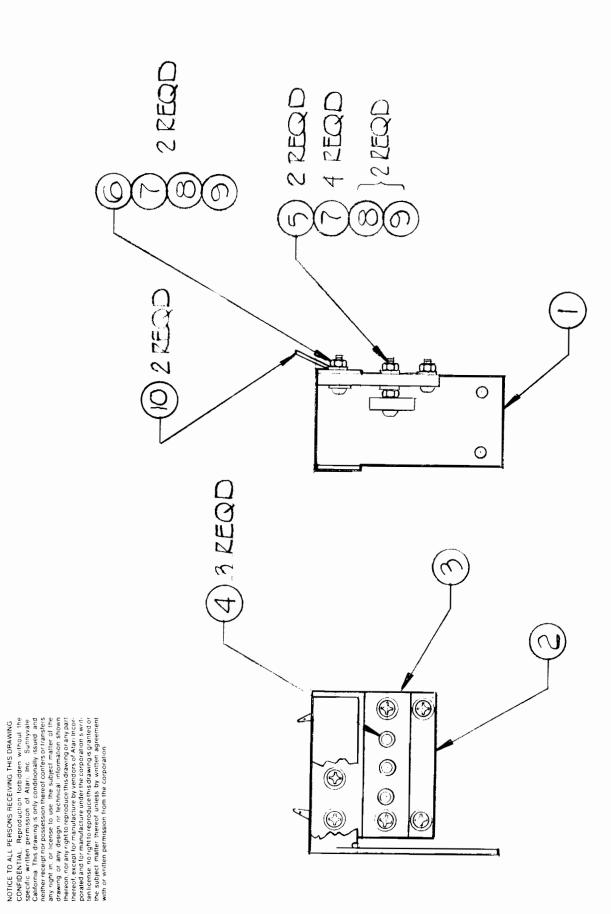




Sensor Assembly Parts List Figure 12

A008046-01 B

		A008046-01 B
Part Number	Qty.	Description
007697-01	1	Sensor Brkt.
008175-01	1	Sensor Backplate
008176-01	1	Sensor Frontplate
38-CL907HL	3	Photocell
72-1408S	2	Screw Pan Hd. 4-40 x ½ Lg.
72-1406S	4	Screw Pan Hd. 4-40 x 3/8 Lg.
75-014S	8	Washer Flat #4
75-044	4	Washer Split Lock #4
75-914S	6	Nut Hex 4-40
79-014	2	Solder Lug Flat #4
	007697-01 008175-01 008176-01 38-CL907HL 72-1408S 72-1406S 75-014S 75-044 75-914S	007697-01 1 008175-01 1 008176-01 1 38-CL907HL 3 72-1408S 2 72-1406S 4 75-014S 8 75-044 4 75-914S 6

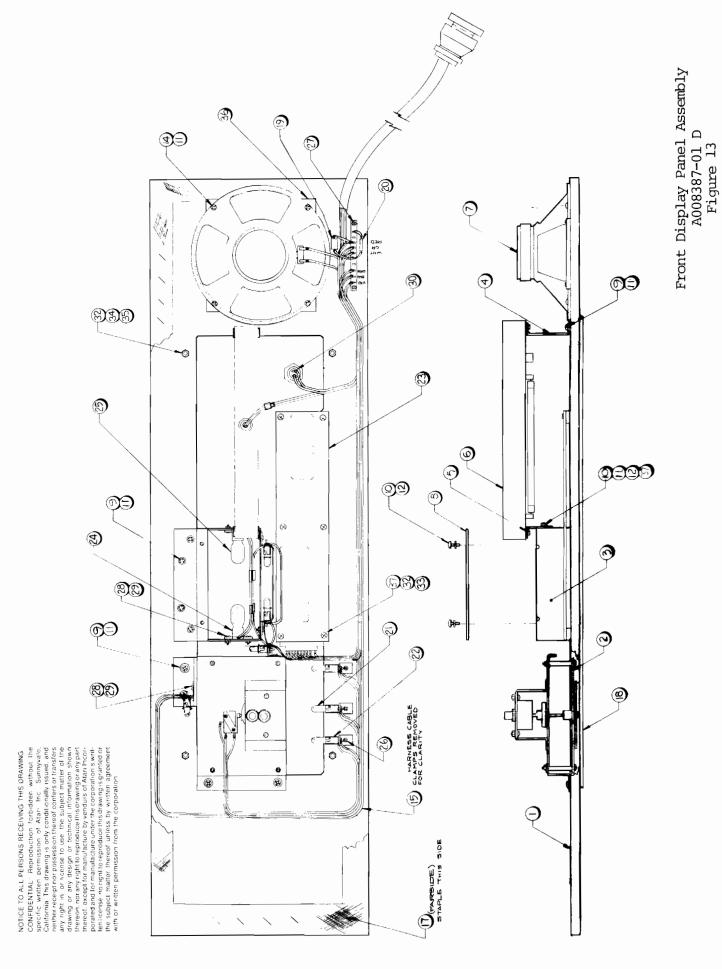




Front Display Panel Assembly Parts List Figure 13

A008387-01

Item	Part Number	Qty.	Description
1	008034-01	1	Front Display Panel
2	A008054-01	1	* Fuel Gauge Mech. Assembly - See Figure 14.
3	008017-01	1	Lamp Box Weldment
4	007999-01	1	Fluorescent Lamp Brkt. (Right)
5	008000-01	1	Fluorescent Lamp Brkt. (Left)
6	A008971-02	1	Fluorescent Light Assy
7	48-001	1	Speaker 8" 8 OHM
8	007710-01	1	Lamp Box Cover
9	82-6808	10	Screw Wood RH #8 x $\frac{1}{2}$ Lg.
10	72-1806S	4	Screw Pan Hd. 8-32 x 3/8 Lg.
11	75-018S	16	Washer Flat #8
12	75-048	10	Washer Split Lock #8
13	75 - 918S	2	Nut Hex8-32
14	82-6808	4	Screw Wood RH #8 x ½ Lg.
15	A008324-01	1	Score Panel Harness
16			
17	008705	1	Grill Cloth
18	007223-01	1	Plex Front
19	29-040	1	Capacitor .lmf
20	10-5221	1	Resistor 220 OHM
21	70-12120MB6	7	Lamps (Mini Bay)
22	79-4316	7	Lamp Sockets (Mini Bay)
23	A007429	1 1	Score Board F-1 Assembly P.C. Board
			Note: Refer to F-1 Operations, Maintenance and Service Manual, TM-088, for breakdown of
			item 23.
24	79-4351	2	Replay Lamp Sockets
25	70-171070	2	Replay Lamps (Candleabra Bulb G.E. 7C7)
26	82-6408	3	Screw Wood #4 x ½ Lg.
27	82-6608	2	Screw, Wood #6 x ½ Lg.
28	72-1408S	8	Screw, Pan Hd. #4-40 x ½ Lg.
29	75 - 914S	8	Nut Hex #4-40
30	62-003	1	Reset Switch
31	72-1816S	4	Screw, Pan Hd. #8-32 x 1" Lg.
32	75-07021	10	Washer Nylon Blk #10
33	72 - 3618S	6	Screw, Flt. Hd. #6-32 x 1 1/8 Lg.
34	82-8814	4	Screw, Button Hd. #10-32 x 7/8 Lg.
35	75 - 910S	4	Nut Hex #10-32
36	005419-01	1	Speaker Grill
37	75 - 916S	6	Hex Nut, 6-32
			* Piece parts of item 2 cannot be replaced on early F-1 units, serial numbers 0001 through 0600. Replace entire Fuel Gauge Mechanism Assembly.

A Warner Communications Company

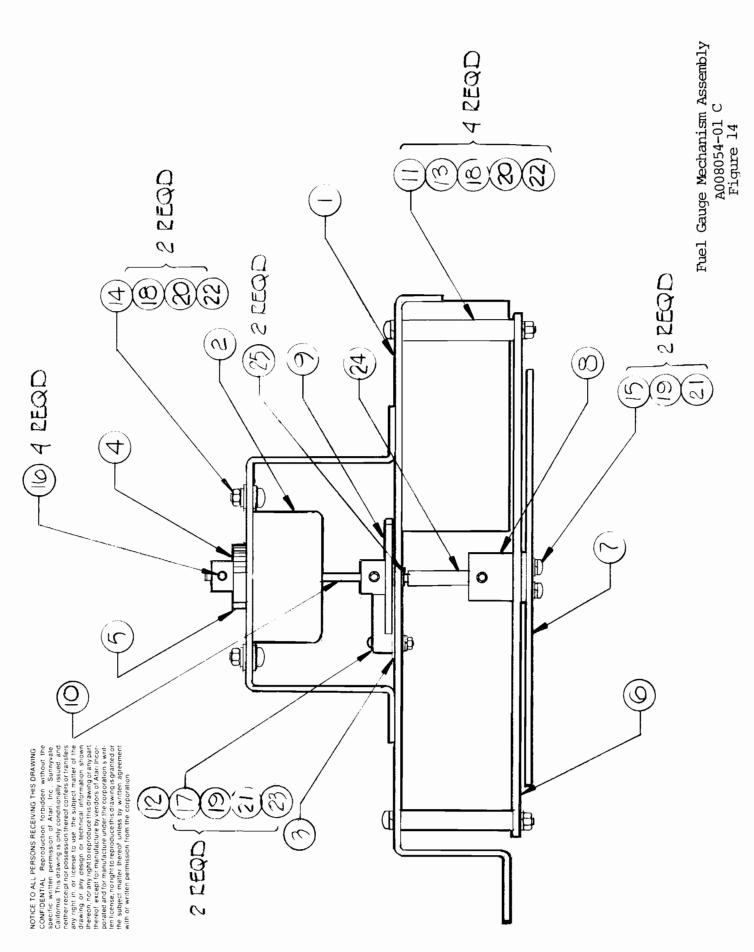



Fuel Gauge Mechanism Assembly Parts List Figure 14


Note: On early F-1 units, serial numbers

0001 through 0600, piece parts of this assembly cannot be replaced.

Replace entire assembly.

A008054-01

1 A008386-01 1 Fuel Gauge Weldment 2 008045-01 1 Timing Motor 3 007371-01 1 Switch Spacer 4 007664-01 1 Fuel Gauge Gear, 18 teeth 5 007663-01 1 Fuel Gauge Gear, 20 teeth 6 007675-01 1 Fuel Gauge Blank 7 008004-01 1 Pointer 8 008005-01 1 Pointer HUB 9 008003-01 1 Timer Cam 10 008016-01 1 Pointer Shaft 11 008015-01 4 Fuel Gauge Standoff 12 65-311C 1 Switch, Micro (Cherry #E22-00K) 13 72-1628S 4 Screw, PAN HD 6-32 x 1 3/4 LG 14 72-1605S 2 Screw Pan HD 6-32 x 5/16 LG 15 72-1406S 2 Screw Pan HD 4-40 x 3/8 LG 16 75-4610 4 Screw set 6-32 x 5/8 17 72-1409S 2 Screw PAN HD 4-40 x 9/16 LG 18 75-016S 6 Washer Flat #6 19 75-014S 4 Washer Flat #4 20 75-046 6 Washer Splitlock #6 21 75-044 4 Washer Splitlock #4 22 75-916S 6 Nut HEX #6 23 75-914S 2 Nut HeX #4 24 008174-01 1 Fuel Gauge Pointer Spacer 25 76-080202 2 Bearing (Thomson 2L2-FF)	Item	Part Number	Qty.	Description A008054-01
3 007371-01 1 Switch Spacer 4 007664-01 1 Fuel Gauge Gear, 18 teeth 5 007663-01 1 Fuel Gauge Gear, 20 teeth 6 007675-01 1 Fuel Gauge Blank 7 008004-01 1 Pointer 8 008005-01 1 Pointer HUB 9 008003-01 1 Timer Cam 10 008016-01 1 Pointer Shaft 11 008015-01 4 Fuel Gauge Standoff 12 65-311C 1 Switch, Micro (Cherry #E22-00K) 13 72-1628S 4 Screw, PAN HD 6-32 x 1 3/4 LG 14 72-1605S 2 Screw Pan HD 6-32 x 5/16 LG 15 72-1406S 2 Screw Pan HD 4-40 x 3/8 LG 16 75-4610 4 Screw set 6-32 x 5/8 17 72-1409S 2 Screw PAN HD 4-40 x 9/16 LG 18 75-016S 6 Washer Flat #6 19 75-014S 4 Washer Flat #4 20 75-046 6 Washer Splitlock #6 21 75-044 4 Washer Splitlock #4 22 75-916S 6 Nut HEX #6 23 75-914S 2 Nut Hex #4 24 008174-01 1 Fuel Gauge Pointer Spacer	1	A008386-01	1	Fuel Gauge Weldment
4 007664-01 1 Fuel Gauge Gear, 18 teeth 5 007663-01 1 Fuel Gauge Gear, 20 teeth 6 007675-01 1 Fuel Gauge Blank 7 008004-01 1 Pointer 8 008005-01 1 Pointer HUB 9 008003-01 1 Timer Cam 10 008016-01 1 Pointer Shaft 11 008015-01 4 Fuel Gauge Standoff 12 65-31lC 1 Switch, Micro (Cherry #E22-00K) 13 72-1628S 4 Screw, PAN HD 6-32 x 1 3/4 LG 14 72-1605S 2 Screw Pan HD 6-32 x 5/16 LG 15 72-1406S 2 Screw Pan HD 4-40 x 3/8 LG 16 75-4610 4 Screw set 6-32 x 5/8 17 72-1409S 2 Screw PAN HD 4-40 x 9/16 LG 18 75-016S 6 Washer Flat #4 20 75-046 6 Washer Splitlock #6 21 75-044 4 Washer Splitlock #4 22 75-916S 6 Nut HEX #6	2	008045-01	1	Timing Motor
5 007663-01 1 Fuel Gauge Gear, 20 teeth 6 007675-01 1 Fuel Gauge Blank 7 008004-01 1 Pointer 8 008005-01 1 Pointer HUB 9 008003-01 1 Timer Cam 10 008016-01 1 Pointer Shaft 11 008015-01 4 Fuel Gauge Standoff 12 65-311C 1 Switch, Micro (Cherry #E22-00K) 13 72-1628S 4 Screw, PAN HD 6-32 x 1 3/4 LG 14 72-1605S 2 Screw Pan HD 6-32 x 5/16 LG 15 72-1406S 2 Screw Pan HD 4-40 x 3/8 LG 16 75-4610 4 Screw set 6-32 x 5/8 17 72-1409S 2 Screw PAN HD 4-40 x 9/16 LG 18 75-016S 6 Washer Flat #6 19 75-014S 4 Washer Flat #4 20 75-046 6 Washer Splitlock #6 21 75-044 4 Washer Splitlock #4 22 75-916S 6 Nut HEX #6 23 75-914S 2 Nut Hex #4 24 008174-01 1 Fuel Gauge Pointer Spacer	3	007371-01	1	Switch Spacer
6 007675-01 1 Fuel Gauge Blank 7 008004-01 1 Pointer 8 008005-01 1 Pointer HUB 9 008003-01 1 Timer Cam 10 008016-01 1 Pointer Shaft 11 008015-01 4 Fuel Gauge Standoff 12 65-311C 1 Switch, Micro (Cherry #E22-00K) 13 72-1628S 4 Screw, PAN HD 6-32 x 1 3/4 LG 14 72-1605S 2 Screw Pan HD 6-32 x 5/16 LG 15 72-1406S 2 Screw Pan HD 4-40 x 3/8 LG 16 75-4610 4 Screw set 6-32 x 5/8 17 72-1409S 2 Screw PAN HD 4-40 x 9/16 LG 18 75-016S 6 Washer Flat #6 19 75-014S 4 Washer Flat #4 20 75-046 6 Washer Splitlock #6 21 75-044 4 Washer Splitlock #6 22 75-916S 6 Nut HEX #6 23 75-914S 2 Nut Hex #4 24 008174-01 1 Fuel Gauge Pointer Spacer	4	007664-01	1	Fuel Gauge Gear, 18 teeth
7 008004-01 1 Pointer 8 008005-01 1 Pointer HUB 9 008003-01 1 Timer Cam 10 008016-01 1 Pointer Shaft 11 008015-01 4 Fuel Gauge Standoff 12 65-311C 1 Switch, Micro (Cherry #E22-00K) 13 72-1628S 4 Screw, PAN HD 6-32 x 1 3/4 LG 14 72-1605S 2 Screw Pan HD 6-32 x 5/16 LG 15 72-1406S 2 Screw Pan HD 4-40 x 3/8 LG 16 75-4610 4 Screw set 6-32 x 5/8 17 72-1409S 2 Screw PAN HD 4-40 x 9/16 LG 18 75-016S 6 Washer Flat #6 19 75-014S 4 Washer Flat #4 20 75-046 6 Washer Splitlock #6 21 75-044 4 Washer Splitlock #4 22 75-916S 6 Nut HEX #6 23 75-914S 2 Nut Hex #4 24 008174-01 1 Fuel Guage Pointer Spacer	5	007663-01	1	Fuel Gauge Gear, 20 teeth
8 008005-01 1 Pointer HUB 9 008003-01 1 Timer Cam 10 008016-01 1 Pointer Shaft 11 008015-01 4 Fuel Gauge Standoff 12 65-31lC 1 Switch, Micro (Cherry #E22-00K) 13 72-1628S 4 Screw, PAN HD 6-32 x 1 3/4 LG 14 72-1605S 2 Screw Pan HD 6-32 x 5/16 LG 15 72-1406S 2 Screw Pan HD 4-40 x 3/8 LG 16 75-4610 4 Screw set 6-32 x 5/8 17 72-1409S 2 Screw PAN HD 4-40 x 9/16 LG 18 75-016S 6 Washer Flat #6 19 75-014S 4 Washer Splitlock #6 21 75-046 6 Washer Splitlock #4 22 75-916S 6 Nut HEX #6 23 75-914S 2 Nut Hex #4 24 008174-01 1 Fuel Guage Pointer Spacer	6	007675-01	1	Fuel Gauge Blank
9 008003-01 1 Timer Cam 10 008016-01 1 Pointer Shaft 11 008015-01 4 Fuel Gauge Standoff 12 65-31lC 1 Switch, Micro (Cherry #E22-00K) 13 72-1628S 4 Screw, PAN HD 6-32 x 1 3/4 LG 14 72-1605S 2 Screw Pan HD 6-32 x 5/16 LG 15 72-1406S 2 Screw Pan HD 4-40 x 3/8 LG 16 75-4610 4 Screw set 6-32 x 5/8 17 72-1409S 2 Screw PAN HD 4-40 x 9/16 LG 18 75-016S 6 Washer Flat #6 19 75-014S 4 Washer Flat #4 20 75-046 6 Washer Splitlock #6 21 75-044 4 Washer Splitlock #4 22 75-916S 6 Nut HEX #6 23 75-914S 2 Nut Hex #4 24 008174-01 1 Fuel Guage Pointer Spacer	7	008004-01	1	Pointer
10 008016-01 1 Pointer Shaft 11 008015-01 4 Fuel Gauge Standoff 12 65-311C 1 Switch, Micro (Cherry #E22-00K) 13 72-1628S 4 Screw, PAN HD 6-32 x 1 3/4 LG 14 72-1605S 2 Screw Pan HD 6-32 x 5/16 LG 15 72-1406S 2 Screw Pan HD 4-40 x 3/8 LG 16 75-4610 4 Screw set 6-32 x 5/8 17 72-1409S 2 Screw PAN HD 4-40 x 9/16 LG 18 75-016S 6 Washer Flat #6 19 75-014S 4 Washer Flat #4 20 75-046 6 Washer Splitlock #6 21 75-044 4 Washer Splitlock #4 22 75-916S 6 Nut HEX #6 23 75-914S 2 Nut Hex #4 24 008174-01 1 Fuel Guage Pointer Spacer	8	008005-01	1	Pointer HUB
11 008015-01 4 Fuel Gauge Standoff 12 65-311C 1 Switch, Micro (Cherry #E22-00K) 13 72-1628S 4 Screw, PAN HD 6-32 x 1 3/4 LG 14 72-1605S 2 Screw Pan HD 6-32 x 5/16 LG 15 72-1406S 2 Screw Pan HD 4-40 x 3/8 LG 16 75-4610 4 Screw set 6-32 x 5/8 17 72-1409S 2 Screw PAN HD 4-40 x 9/16 LG 18 75-016S 6 Washer Flat #6 19 75-014S 4 Washer Flat #4 20 75-046 6 Washer Splitlock #6 21 75-044 4 Washer Splitlock #4 22 75-916S 6 Nut HEX #6 23 75-914S 2 Nut Hex #4 24 008174-01 1 Fuel Guage Pointer Spacer	9	008003-01	1	Timer Cam
12 65-311C	10	008016-01	1	Pointer Shaft
13 72-1628S 4 Screw, PAN HD 6-32 x 1 3/4 LG 14 72-1605S 2 Screw Pan HD 6-32 x 5/16 LG 15 72-1406S 2 Screw Pan HD 4-40 x 3/8 LG 16 75-4610 4 Screw set 6-32 x 5/8 17 72-1409S 2 Screw PAN HD 4-40 x 9/16 LG 18 75-016S 6 Washer Flat #6 19 75-014S 4 Washer Flat #4 20 75-046 6 Washer Splitlock #6 21 75-044 4 Washer Splitlock #6 21 75-916S 6 Nut HEX #6 23 75-914S 2 Nut Hex #4 24 008174-01 1 Fuel Guage Pointer Spacer	11	008015-01	4	Fuel Gauge Standoff
14 72-1605S 2 Screw Pan HD 6-32 x 5/16 LG 15 72-1406S 2 Screw Pan HD 4-40 x 3/8 LG 16 75-4610 4 Screw set 6-32 x 5/8 17 72-1409S 2 Screw PAN HD 4-40 x 9/16 LG 18 75-016S 6 Washer Flat #6 19 75-014S 4 Washer Flat #4 20 75-046 6 Washer Splitlock #6 21 75-044 4 Washer Splitlock #4 22 75-916S 6 Nut HEX #6 23 75-914S 2 Nut Hex #4 24 008174-01 1 Fuel Guage Pointer Spacer	12	65-311C	1	Switch, Micro (Cherry #E22-00K)
15 72-1406S 2 Screw Pan HD 4-40 x 3/8 LG 16 75-4610 4 Screw set 6-32 x 5/8 17 72-1409S 2 Screw PAN HD 4-40 x 9/16 LG 18 75-016S 6 Washer Flat #6 19 75-014S 4 Washer Flat #4 20 75-046 6 Washer Splitlock #6 21 75-044 4 Washer Splitlock #4 22 75-916S 6 Nut HEX #6 23 75-914S 2 Nut Hex #4 24 008174-01 1 Fuel Guage Pointer Spacer	13	72-1628S	4	Screw, PAN HD 6-32 x 1 3/4 LG
16 75-4610 4 Screw set 6-32 x 5/8 17 72-1409S 2 Screw PAN HD 4-40 x 9/16 LG 18 75-016S 6 Washer Flat #6 19 75-014S 4 Washer Flat #4 20 75-046 6 Washer Splitlock #6 21 75-044 4 Washer Splitlock #4 22 75-916S 6 Nut HEX #6 23 75-914S 2 Nut Hex #4 24 008174-01 1 Fuel Guage Pointer Spacer	14	72-1605S	2	Screw Pan HD 6-32 x 5/16 LG
17 72-1409S 2 Screw PAN HD 4-40 x 9/16 LG 18 75-016S 6 Washer Flat #6 19 75-014S 4 Washer Flat #4 20 75-046 6 Washer Splitlock #6 21 75-044 4 Washer Splitlock #4 22 75-916S 6 Nut HEX #6 23 75-914S 2 Nut Hex #4 24 008174-01 1 Fuel Guage Pointer Spacer	15	72 - 1406S	2	Screw Pan HD 4-40 x 3/8 LG
18 75-016S 6 Washer Flat #6 19 75-014S 4 Washer Flat #4 20 75-046 6 Washer Splitlock #6 21 75-044 4 Washer Splitlock #4 22 75-916S 6 Nut HEX #6 23 75-914S 2 Nut Hex #4 24 008174-01 1 Fuel Guage Pointer Spacer	16	75 - 461 0	4	Screw set 6-32 x 5/8
19 75-014S 4 Washer Flat #4 20 75-046 6 Washer Splitlock #6 21 75-044 4 Washer Splitlock #4 22 75-916S 6 Nut HEX #6 23 75-914S 2 Nut Hex #4 24 008174-01 1 Fuel Guage Pointer Spacer	17	72 - 1409S	2	Screw PAN HD 4-40 x 9/16 LG
20 75-046 6 Washer Splitlock #6 21 75-044 4 Washer Splitlock #4 22 75-916S 6 Nut HEX #6 23 75-914S 2 Nut Hex #4 24 008174-01 1 Fuel Guage Pointer Spacer	18	75 - 016S	6	Washer Flat #6
21 75-044 4 Washer Splitlock #4 22 75-916S 6 Nut HEX #6 23 75-914S 2 Nut Hex #4 24 008174-01 1 Fuel Guage Pointer Spacer	19	75-014S	4	Washer Flat #4
22 75-916S 6 Nut HEX #6 23 75-914S 2 Nut Hex #4 24 008174-01 1 Fuel Guage Pointer Spacer	20	75-046	6	Washer Splitlock #6
23 75-914S 2 Nut Hex #4 24 008174-01 1 Fuel Guage Pointer Spacer	21	75-044	4	Washer Splitlock #4
24 008174-01 l Fuel Guage Pointer Spacer	22	75-916S	6	Nut HEX #6
	23	75-914S	2	Nut Hex #4
25 76-080202 2 Bearing (Thomson 2L2-FF)	24	008174-01	1	Fuel Guage Pointer Spacer
	25	76-080202	2	Bearing (Thomson 2L2-FF)

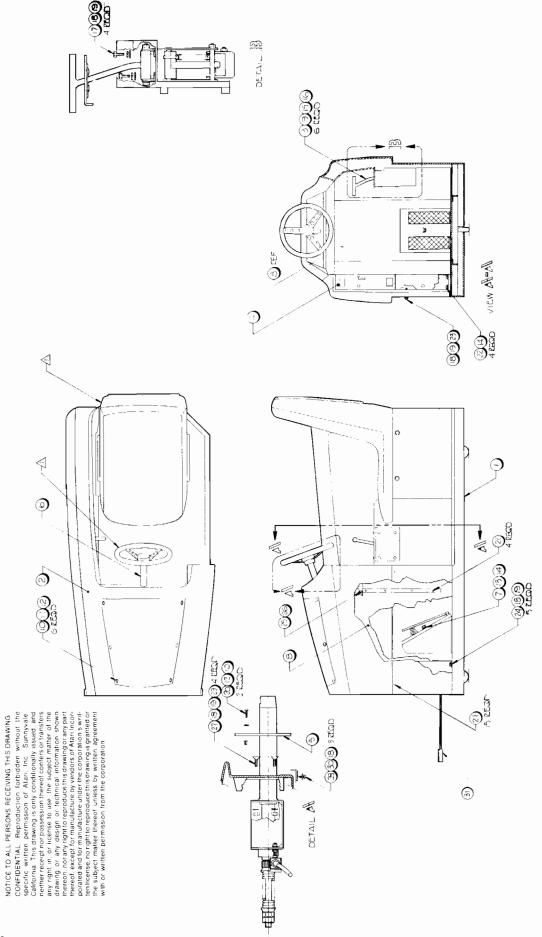




Car Body and Chassis Assembly Parts List Figure 15

A007234-01

Item	Part Number	Qty.	Description A00/234-01
1	A007214-01	1	Chassis Assembly
2	A007237-01	1	Car Body Assembly
3	A007247-xx	1	Speed Change Assembly - See Figure 16.
4	A007236-01	1	Coin Box Assembly
5	A007218-22	1	Instrument Panel Display
6	A007218-XX	1	Steering Column Assembly - See Figure 17.
7	A007230-01	1	Modified Foot Pedal Mounting Assembly
8	007209-01	1	Foot Pedal Shield
9	007233-01	1	Speed Change Cover
10	75-99090006	8	Well Nut, Blind Fastener
11	82-8014	4	10-32 x 7/8" Lg. Button Hd. Screw
12	75-07021	6	Nylon Washer (Blk) #10
13	72-5524	1	14-20 x 1½" Lg. Hex Hd. Screw Mach
14	75-045S	5	Lock Washer
15	82-8508	6	14-20 x 12" Lg. Button Hd Screw
16	75-07029	6	13-Nylon Washers Black
17	72-5212	4	10-32 x .75" Lg. Hex Hd Screw Mach
18	75-010S	17	#10 Flat Washer
19	75-040	14	#10 Lock Washer
20	82-8016	2	10-32 x 1.00" Lg. Button Hd. Screw
21	73-77001	19	Rivet, Pop 1/8 x 3/8" Lg.
22	72-5510	4	14-20 x 5/8" Lg. Hex Hd. Screw
23	72-1024S	1	10-32 x 1.50" Lg. Screw, Mach, Pan Hd.
24	72-5210	5	10-32 x 5/8" Lg. Screw, Hex Hd.
25	72-5528	1	Screw Hex Hd. 4-20 x 1 3/4 Lg.
26	75 - 915S	1	Nut Hex Hd. 4-20
27	75-3012	4	Screw Flat Hd. 10-32 x 3/4 Lg.
28	007218-21	1 1	Plex Retainer
29	75 - 910S	4	Nut Hex Hd #10-32
30	72-6812	3	Screw Self Tapping #10 x 3/4 Lg.
31	007654-01	1	Harness
32	007653-01	3	Allen Wrench Set
33	007655-01	1	Spare Light Bulb E-12, 110V, 10W
34	A007235-01	1	Seat Assembly
35	007218-01	1	Steering Wheel
36	007218-02	1	Shaft Hub
37	007218-03	1	Steering Wheel Hub
38	007218-04	3	Retaining Screws
39	007218-05	1	Hub Plate
40	A007541-XX	1	Packing Container
			* Piece parts of item 3 cannot be replaced on early F-1 units, serial numbers 0001 through 0600. Replace entire Speed Change Assembly.

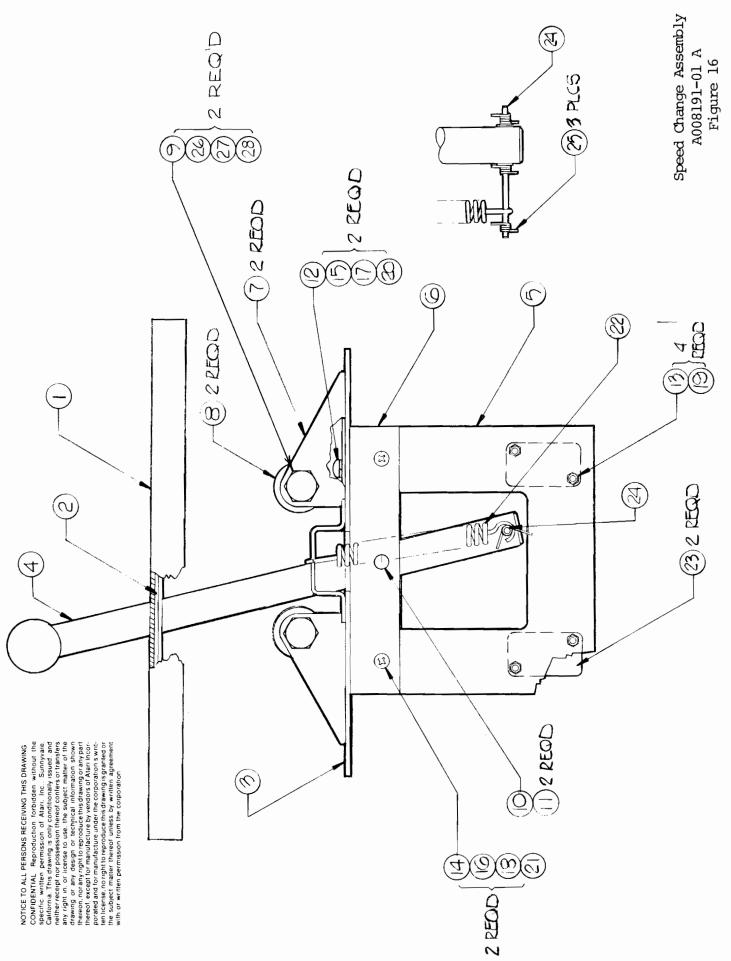




Speed Change Assembly Parts List Figure 16

Note: On early F-1 units, serial numbers 0001 through 0600, piece of this assembly cannot be replaced. Replace entire assembly.

A008191-01

			A008191-01
Item	Part Number	Qty.	Description
1	008020-01	1	Gear Change Top Plate
2	008020-01	ı	" " " Insert
3	008019-01	1	" " Retaining Plate Weldment
4	008007-01	1	" " Handle Weldment
5	008002-01	1	" " Switch Brkt
6	008014-01	1	" " Brkt
7	008008-01	2	Roller Brkt
8	008006-01	2	Roller
9	008009-01	2	Roller Shaft
10	007373-01	1	Shaft - Thrust Control
11	73-3002	2	Retaining Ring (Pic Z3-2)
12	72 - 1006S	2	Screw Pan Hd 10-32 x 3/8 Lg.
13	72-1408S	4	Screw Pan Hd 4-40 x 9/16 Lg.
14	72-1805S	2	Screw Pan Hd 8-32 x 5/16 Lg.
15	75 - 020S	2	Washer Flat #10
16	75-028S	2	Washer Flat #8
17	75-040	2	Washer Split Lock #10
18	75-048	2	Washer Split Lock #8
19	75-044	6	Washer Split Lock #4
20	75 - 920S	2	Nut Hex 10-32
21	75-928S	2	Nut Hex 8-32
22	008382-01	1	Spring
23	65-011C	2	Micro Switch
24	007372-01	1	Spring Pin - Thrust Control
25	007535-01	3	Retainer - Compression
			<u>.</u>
ļ			
j			
		- 1	
}		- 1	

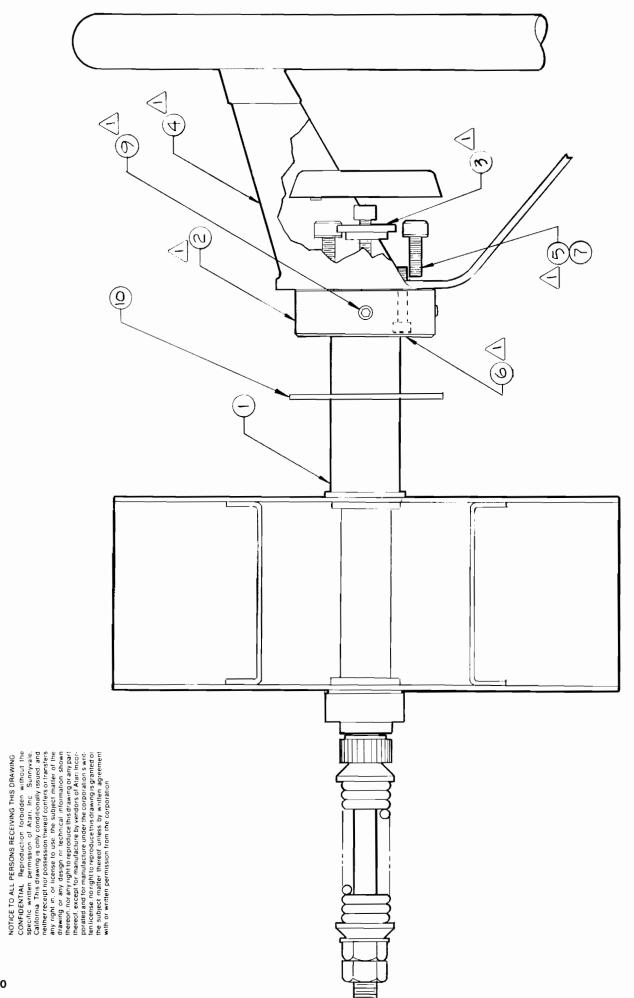


Steering Column Assembly A008060-01 D Figure 17




Steering Column Assembly Parts List Figure 17

A008060-01

			A008060-01
Item	Part Number	Qty.	Description
1	A008178-01	1	Steering Rack and Pinion Assembly
2	007705-01	1	Steering Wheel Hub
3	007700-01	1	Steering Wheel Spacer
4	908 7 01-01	l l	Steering Wheel, MODIFIED
5	72-8716	3	Screw, Socket Hd, 5/16-18 x 1"
6	72-851 4	3	Screw, Socket Hd, 1/4-20 x
7	75-043	3	Washer, Split Lock, 5/16"
8			
9	72-4010	2	Screw, Set, 10-32 x 5/8 Lg
10	007872-01	ł	DASHBOARD, SILKSCREEN

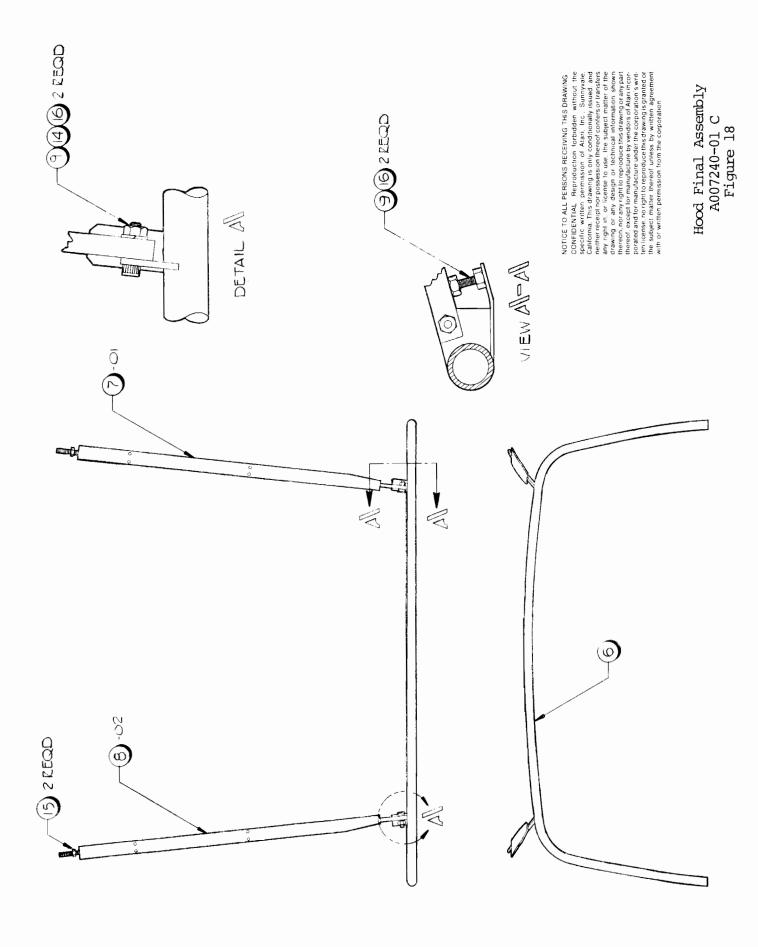

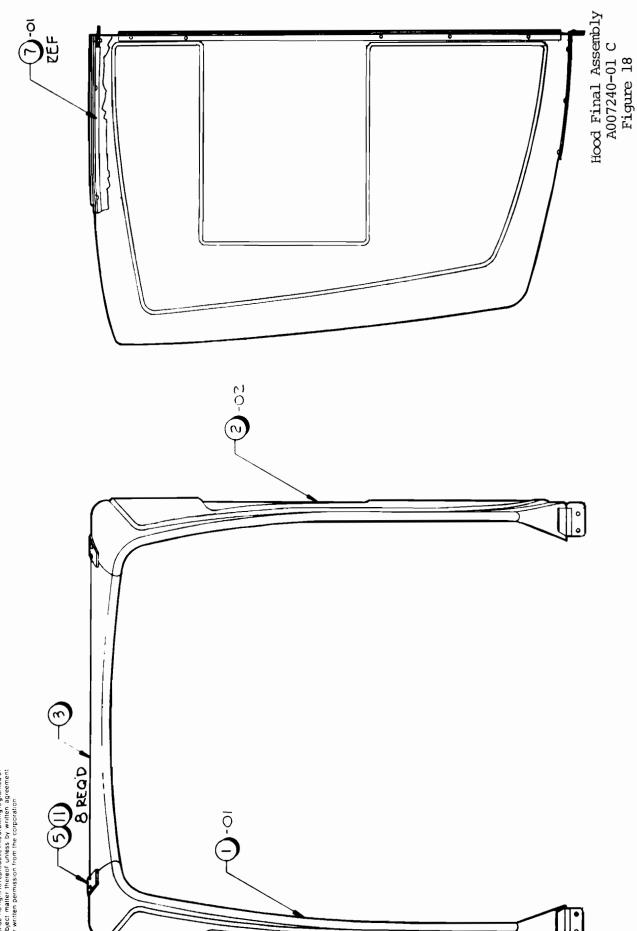

NOTICE TO ALL PERSONS RECEVING THIS DRAWING COMFIDENTIAL Reproduction tofbodders without the specific written permission of Alari inc. Surmywale California. This drawing is only conditionally issued and neither reception opossession intend control of the artificial and right in. or incerse to use the subject matter of the drawing or any design of technical information shown thereon nor any right to reproduce this drawing or any part intends of except for manufacture by vendors of Alari incorporated and for manufacture under the corporation's written incerse no right response the stratement of the subject matter thereof unless by winties agreement with or written permission from the corporation.



Hood Final Assembly Parts List Figure 18

A007240-01

Item	Part Number	Qty.	A007240-01 Description
tem	Part Number	Qiy.	
1	A007239-01	1	Left Side Hood Panel Assembly
2	A007239-02	1	Right Side Hood Panel Assembly
3	007220-01	1	Top Hood Panel
4			
5	007153-01	2	Top Hood Support Attachment
6	007139-01	1	Hood Main Supprot-Weldment
7	007154-01	1	Top Hood Support - Weldment
8	007154-02	1	Top Hood Support - Weldment
9	72-5216	4	Screw Hex Hd 10-32 x 1.00" Lg.
10			
11	75-1808S	8	Screw Pan Hd 8-32 x $\frac{1}{2}$ " Lg.
12			
13			77) 711 7 - 1 410
14	75-040	2	Washer Split-Lock #10
15	75-919	2	Nut Hex 3/8 x 16
16 17	75-910S A007542-XX	4	Nut Hex #10 Packing Container
-			
		i	

W A Warner Communications Company

			•
			-
			٠
			`

			•
			-
			٠
			`

			•
			-
			٠
			`

